



Linksys PAP2T Configuration

Dear Customer,

Thank you for subscribing to **Eyesurf's Digital Phone** service. This document outlines the steps required to successfully configure your Linksys ATA, in order to use your Digital Phone service.

It is recommended that you fully read this document prior to configuring your device, so that you are aware of all the steps.

Please follow the directions below. If you get stuck at any point, feel free to call our technical support centre at 519-804-SURF (7873)

1. Connect the AC power adapter to your Linksys ATA, and plug the power adapter into the wall outlet
2. Take an Ethernet cord, and plug one end into your Linksys, and the other end into your router or PC/Laptop.
3. Before proceeding, be sure to have a pen ready as we will need to record some information in the steps that follow.
4. Plug a phone into the **Phone1** port of the ATA.
5. From the phone that's plugged into the ATA, press the hook/flash key and dial the star (*) key four times.
6. You will be presented with a recording saying, "*Configuration menu. Please enter option followed by the pound key.*" Enter the keys **1 1 0 #**
7. The IP address of your ATA will now be spoken to you. For example **192.168.1.100**. Please write this number on a piece of paper, as you will require it in the next step.

- Now open a browser, and navigate to the address that you wrote down in step (7). Simply type that address into the address bar of your browser. A blue/purple screen similar to the following will be displayed. Click **Admin Login** toward the right of the page

The screenshot shows the Linksys Voice configuration interface. The top navigation bar includes the Linksys logo, the text "A Division of Cisco Systems, Inc.", and the firmware version "5.1.6(LS)". Below this, a secondary bar displays "Phone Adapter with 2 Ports for Voice-Over-IP" and "PAP2". A main menu on the left is labeled "Voice". The central navigation area contains tabs for "Info", "System", "User 1", and "User 2", with "System" selected. Below the tabs, there are links for "Basic View (switch to advanced view)" and "Admin Login", with the latter circled in red. The main content area is divided into three sections: "System Information", "Product Information", and "System Status".


System Information	DHCP: Enabled Host Name: LinksysPAP Current Netmask: 255.255.255.0 Primary DNS: 192.168.1.254 Secondary DNS:	Current IP: 192.168.1.75 Domain: lan Current Gateway: 192.168.1.254
Product Information	Product Name: PAP2T Software Version: 5.1.6(LS) MAC Address: 0014BF9C1140 Customization: Open	Serial Number: FL18H50B1129 Hardware Version: 5.1.5 Client Certificate: Installed
System Status	Current Time: 1/1/2003 12:49:51 Broadcast Pkts Sent: 2 Broadcast Pkts Recv: 1024	Elapsed Time: 00:46:04 Broadcast Bytes Sent: 684 Broadcast Bytes Recv: 66247

- Now, click the **Line 1** menu item at the top

The screenshot shows the Linksys Voice configuration interface, similar to the previous one. The top navigation bar and secondary bar are identical. The main menu on the left is labeled "Voice". The central navigation area contains tabs for "Info", "System", "SIP", "Regional", "Line 1", "Line 2", "User 1", and "User 2", with "Line 1" circled in red. Below the tabs, there are links for "Basic View (switch to advanced view)" and "User Login". The main content area is divided into three sections: "System Information", "Product Information", and "System Status".

System Information	DHCP: Enabled Host Name: LinksysPAP Current Netmask: 255.255.255.0 Primary DNS: 192.168.1.254 Secondary DNS:	Current IP: 192.168.1.75 Domain: lan Current Gateway: 192.168.1.254
Product Information	Product Name: PAP2T Software Version: 5.1.6(LS) MAC Address: 0014BF9C1140 Customization: Open	Serial Number: FL18H50B1129 Hardware Version: 5.1.5 Client Certificate: Installed
System Status		

10. Ensure that the **Proxy**, **User ID** and **Password** fields are set in accordance with your Digital Phone account. The proxy is always **voip.eyesurf.net** and the User ID is always your phone number with a leading “1”. So if your number was 5198041234, you would enter **15198041424**.

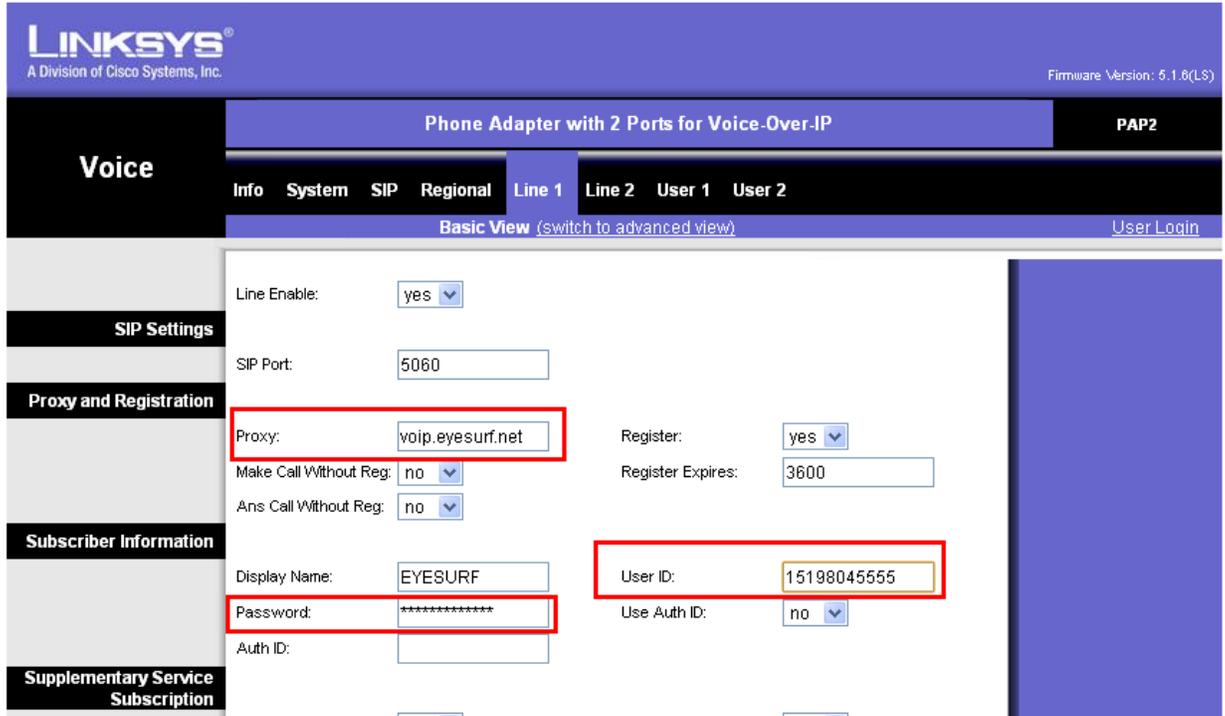

LINKSYS
A Division of Cisco Systems, Inc. Firmware Version: 5.1.6(LS)

Voice Phone Adapter with 2 Ports for Voice-Over-IP **PAP2**

Info System SIP Regional **Line 1** Line 2 User 1 User 2

Basic View (switch to advanced view) User Login

SIP Settings

Line Enable:

SIP Port:

Proxy and Registration

Proxy: Register:

Make Call Without Reg: Register Expires:

Ans Call Without Reg:

Subscriber Information


Display Name: User ID:

Password: Use Auth ID:

Auth ID:

Supplementary Service Subscription

11. Once you are complete, scroll to the bottom and click **Save Settings**

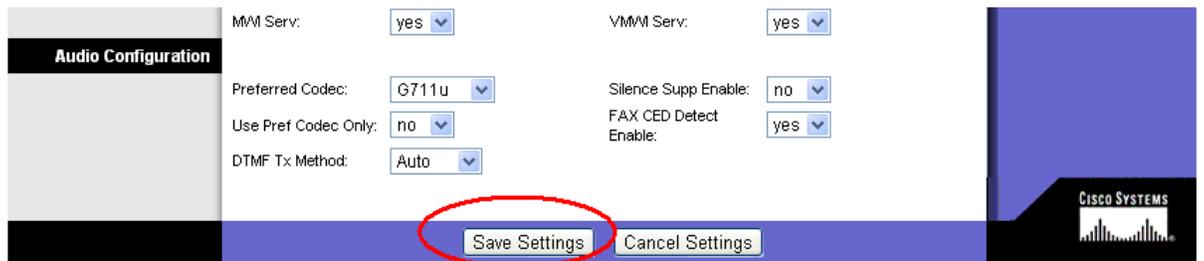

Audio Configuration

MMI Serv: VMVM Serv:

Preferred Codec: Silence Supp Enable:

Use Pref Codec Only: FAX CED Detect Enable:

DTMF Tx Method:

CISCO SYSTEMS

11. You will be presented with the following screen indicating that the device is resetting



**PAP2 is updating your configuration. Unit may reset.
You will be redirected to the configuration page in 5 seconds.
If not, you can click [HERE](#) to return to the configuration page.**

That's it! Your ATA device should now be configured properly. If you continue to experience any troubles, please phone technical support at 519-804-SURF and push "2" for Technical Support.